


NOVA LUCE


9174151, 9174152

1

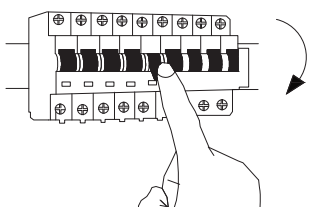


Turn off the general switch

2

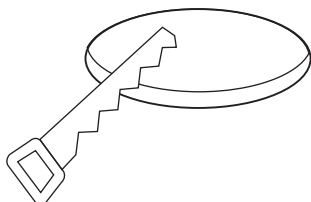


Create a Cut Out 6.2 cm

3

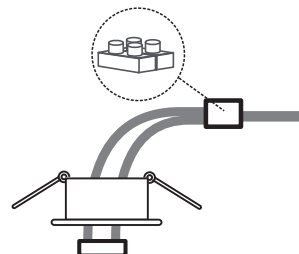


Connect the wires

4

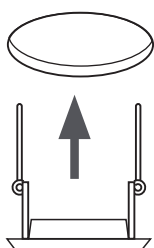


Press the brackets together to insert it into the hole

5




Fix it into place

6

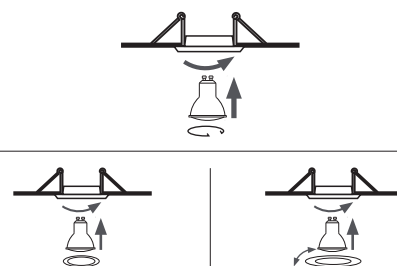

Insert the bulb by rotate and make adjustments

7

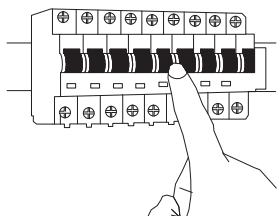

Turn on the general switch

