


NOVA LUCE


9970100 9970101 9970102
9970103 9970104 9970200
9970210 9970220

1

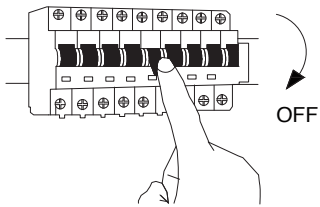


Turn off the general switch

2

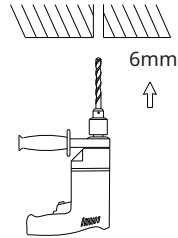


Drill holes

3

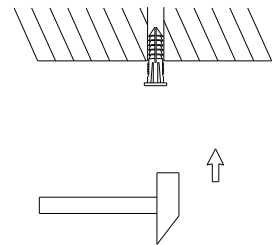


Apply plastic anchors

4

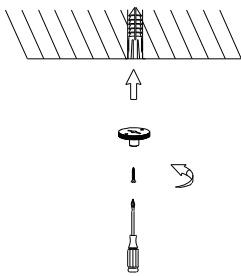


Apply the element with screw

5

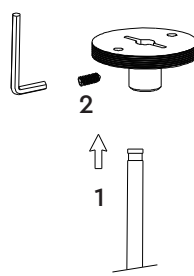


Apply the elements in place

6

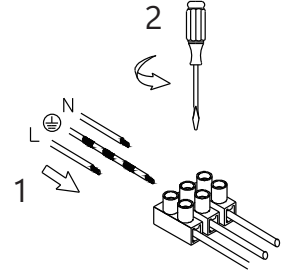

Connect the wires

7

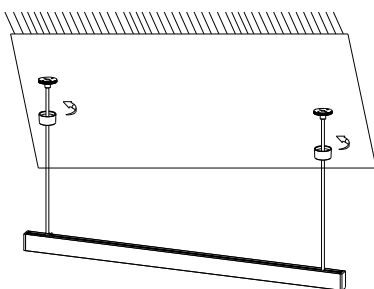

Apply the elements in place

