


# NOVA LUCE


832401

1

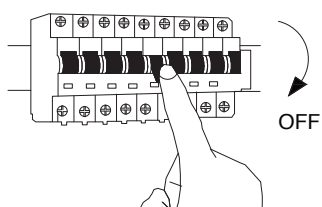


Turn off the general switch

2

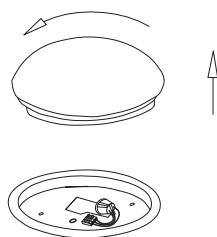


By rotating break it apart

3

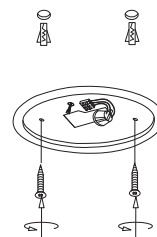


Drill holes & apply plastic anchors  
With screws

4

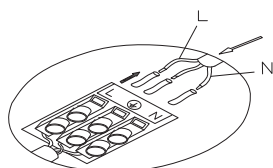


Connect the wires

5

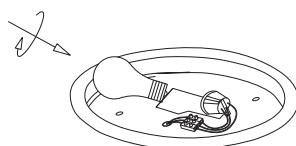


Apply the bulb by rotating

6

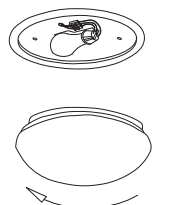

By rotating put it back together

7

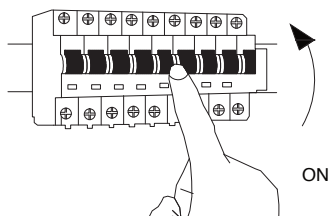

Turn on the general switch

