


# NOVA LUCE


9187006

1

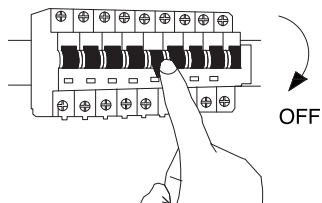


Turn off the general switch

2

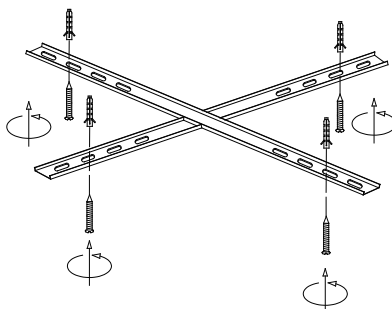


Drill holes & apply plastic anchors  
With screws

3

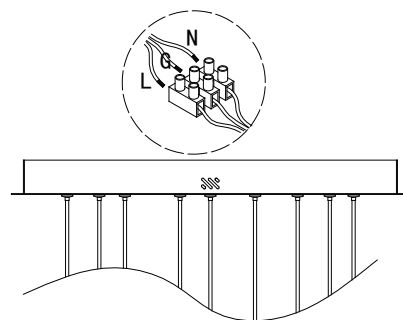


Connect the wires

4

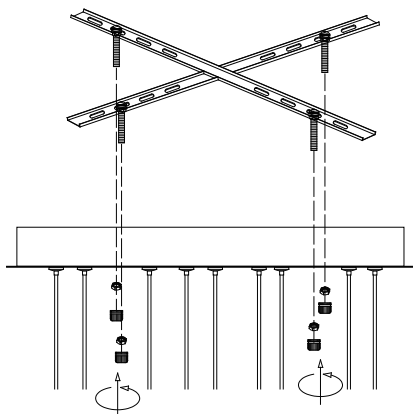


Apply the screws

5

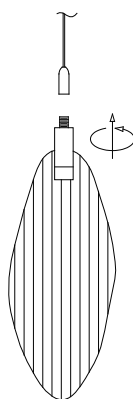

apply the glass

6

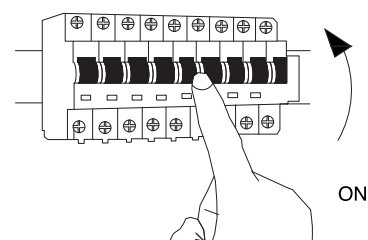

Turn on the general switch

