


NOVA LUCE


9580696

1




Drill a hole & apply plastic anchor

2

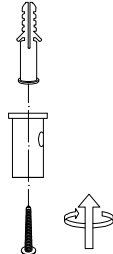


Apply the screw with the hanging Element

3

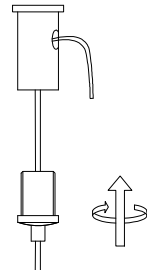


Place the cable in place

4

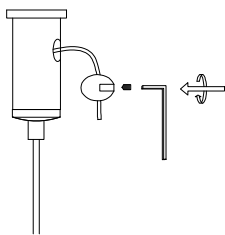


By rotating tight it up

5

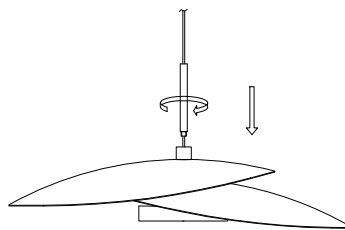


By rotating apply it in place

6

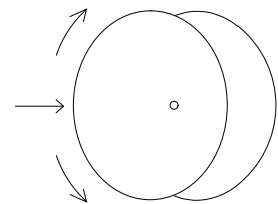

Place the product in to place

7

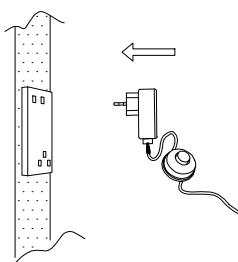

Plug it in

