

# NOVA LUCE


9333079

1



Turn off the general switch

2

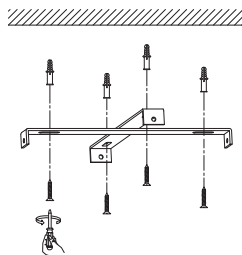


Drill holes & apply plastic anchors  
With screws

3




Connect the wires

4

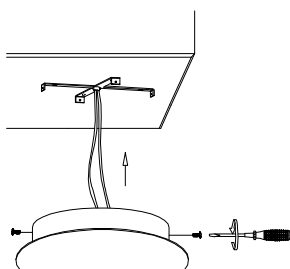

Apply the side screws

5

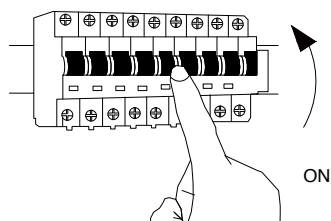

Turn on the general switch

