

NOVA LUCE


9009149

1



Turn off the general switch

2

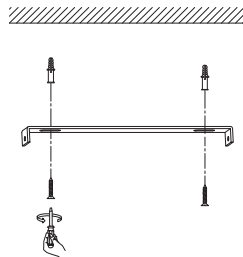


Drill holes & apply plastic anchors
With screws

3




Connect the wires

4

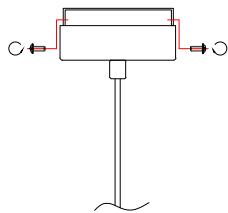


Apply the side screws

5

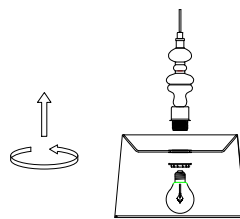

Apply the remaining part
By rotating

6

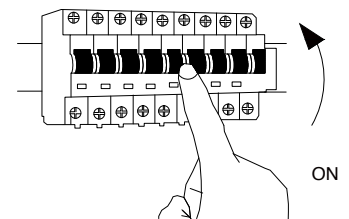

Turn on the general switch

