NOVA LUCE

9058103 9058104 9058105 9058106
9058107 9058108 9058109 9058110

Surface Installation

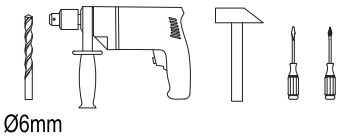



Drill holes ①

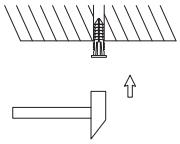

Apply plastic anchors ②

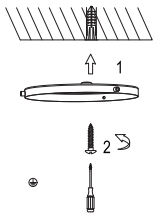

Tie up screws ③

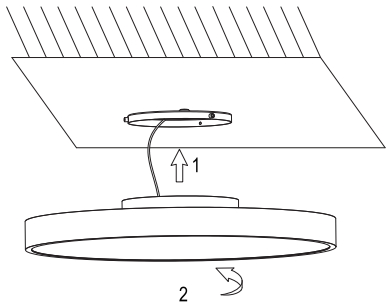

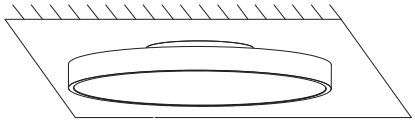

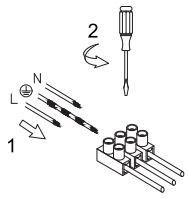

Connect wires ④

Put it in place by rotate ⑤

Installation complete ⑥

9058101 9058102

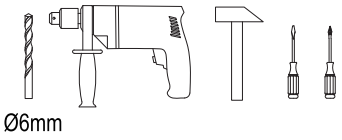



Drill holes ①

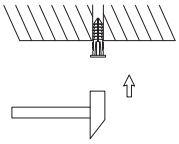

Apply plastic anchors ②

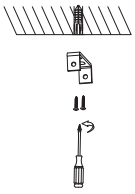

Tie up screws ③

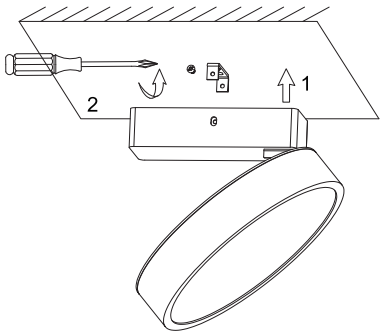

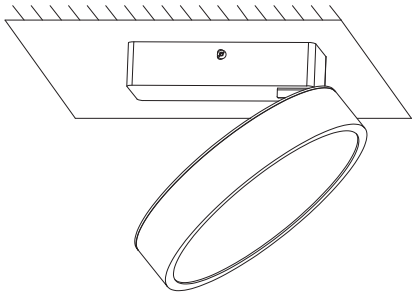

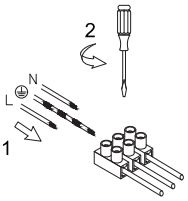

Connect wires ④

Put it in place by rotate ⑤

Installation complete ⑥