



# NOVA LUCE


93333070

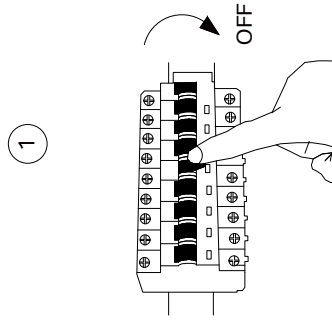


Turn off the general switch

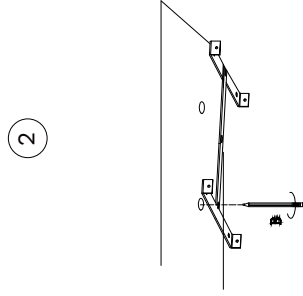


Mark where to drill

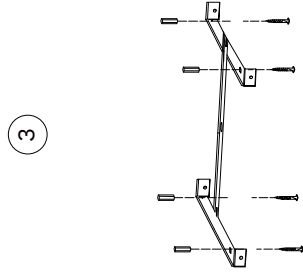


Apply plastic anchors with screws

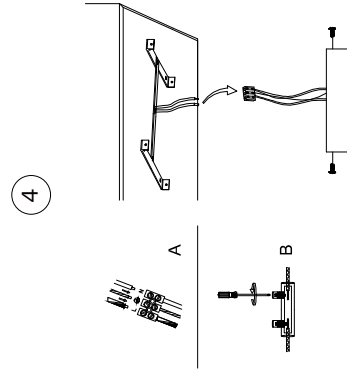

Connect the wires

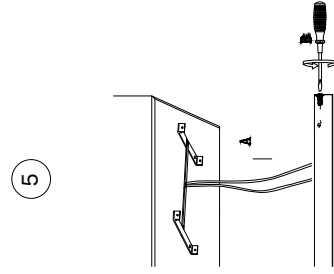

Apply the side screws

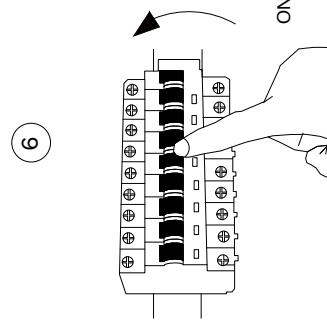

Turn on the general switch

