

# NOVA LUCE


9080142

1




Turn off the general switch

2

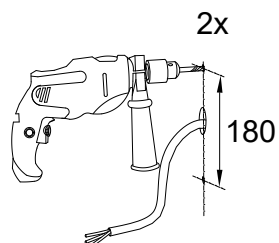


Drill holes

3

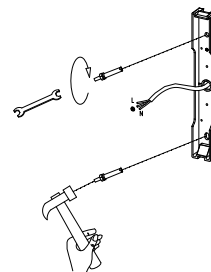


Apply nut

4

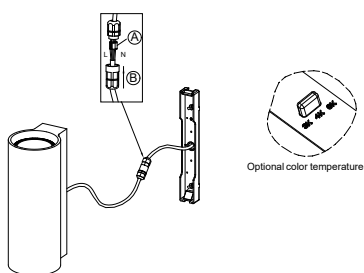


Connect wires

5



Fix the nuts in place

6

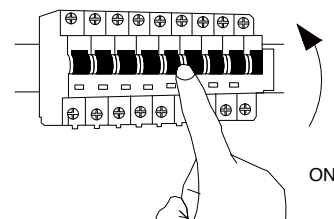

Connect the wires

