



# NOVA LUCE


9186713

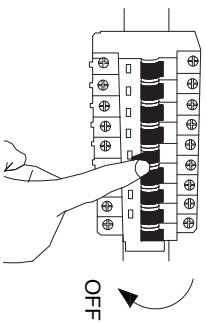


1. Turn off the general switch

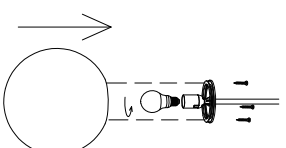


2. By rotating, apply the acrylic

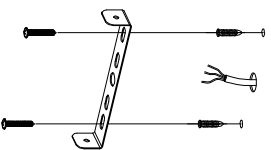


3. Align, mark and drill holes  
To apply the screws

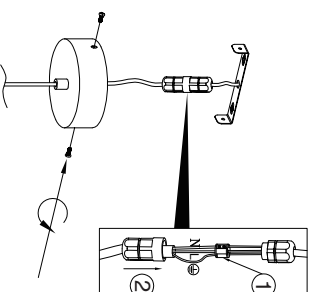

4. Connect the wires

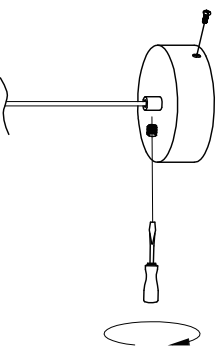

5. Apply the side screws

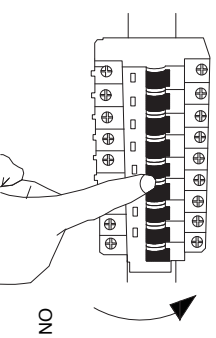

6. Turn on the general switch

