


NOVA LUCE


9111504/ 9111505/ 9111506

1

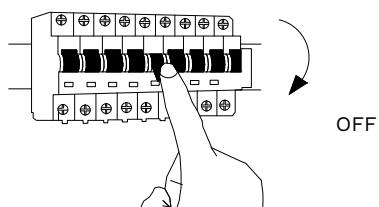


Turn off the general Switch

2

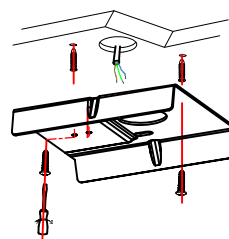


Align, mark & drill holes, apply plastic anchors & tie up screws to make it stable

3

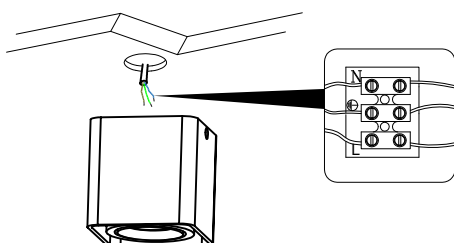


Connect wires

4

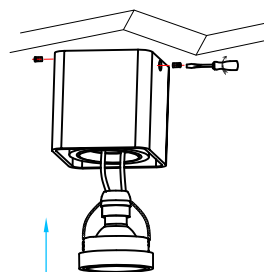


Fix the luminaire into place by tying up side screws & insert bulb into place

5

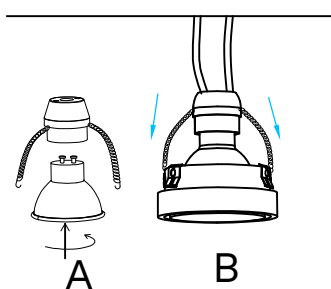

Adjust the brackets & insert bulb by rotate

6

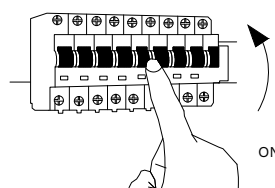

Turn on the general Switch

