


# NOVA LUCE

9333078


4 4

1

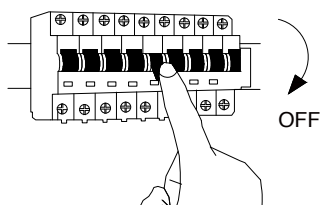


Turn off the general switch

2

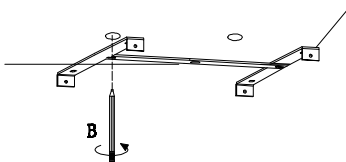


Mark areas & drill holes

3

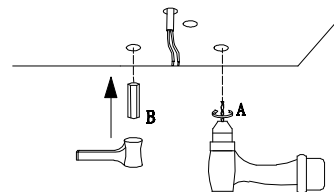


Apply plastic anchors

4

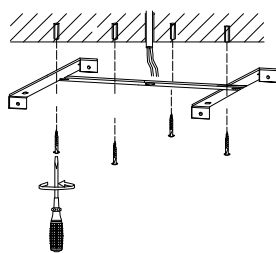


Apply screws

5

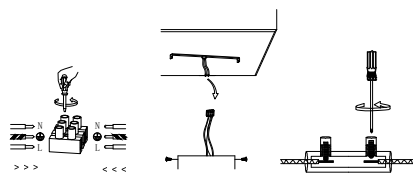

Connect the wires & apply  
Side screws

6

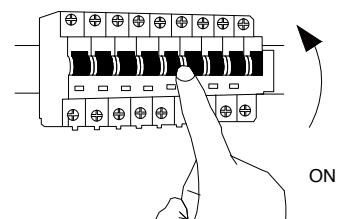

Turn on the general switch

